

Study of surface cleaning and Cs-activation on GaN photocathodes


J. Schaber^{1,2}, R. Xiang¹, J. Teichert¹, A. Arnold¹, P. Michel¹, P. Murcek¹

¹Helmholtz-Center Dresden-Rossendorf (HZDR), Dresden, Germany

² Technische Universität Dresden, Germany

1. Introduction


SRF Gun II

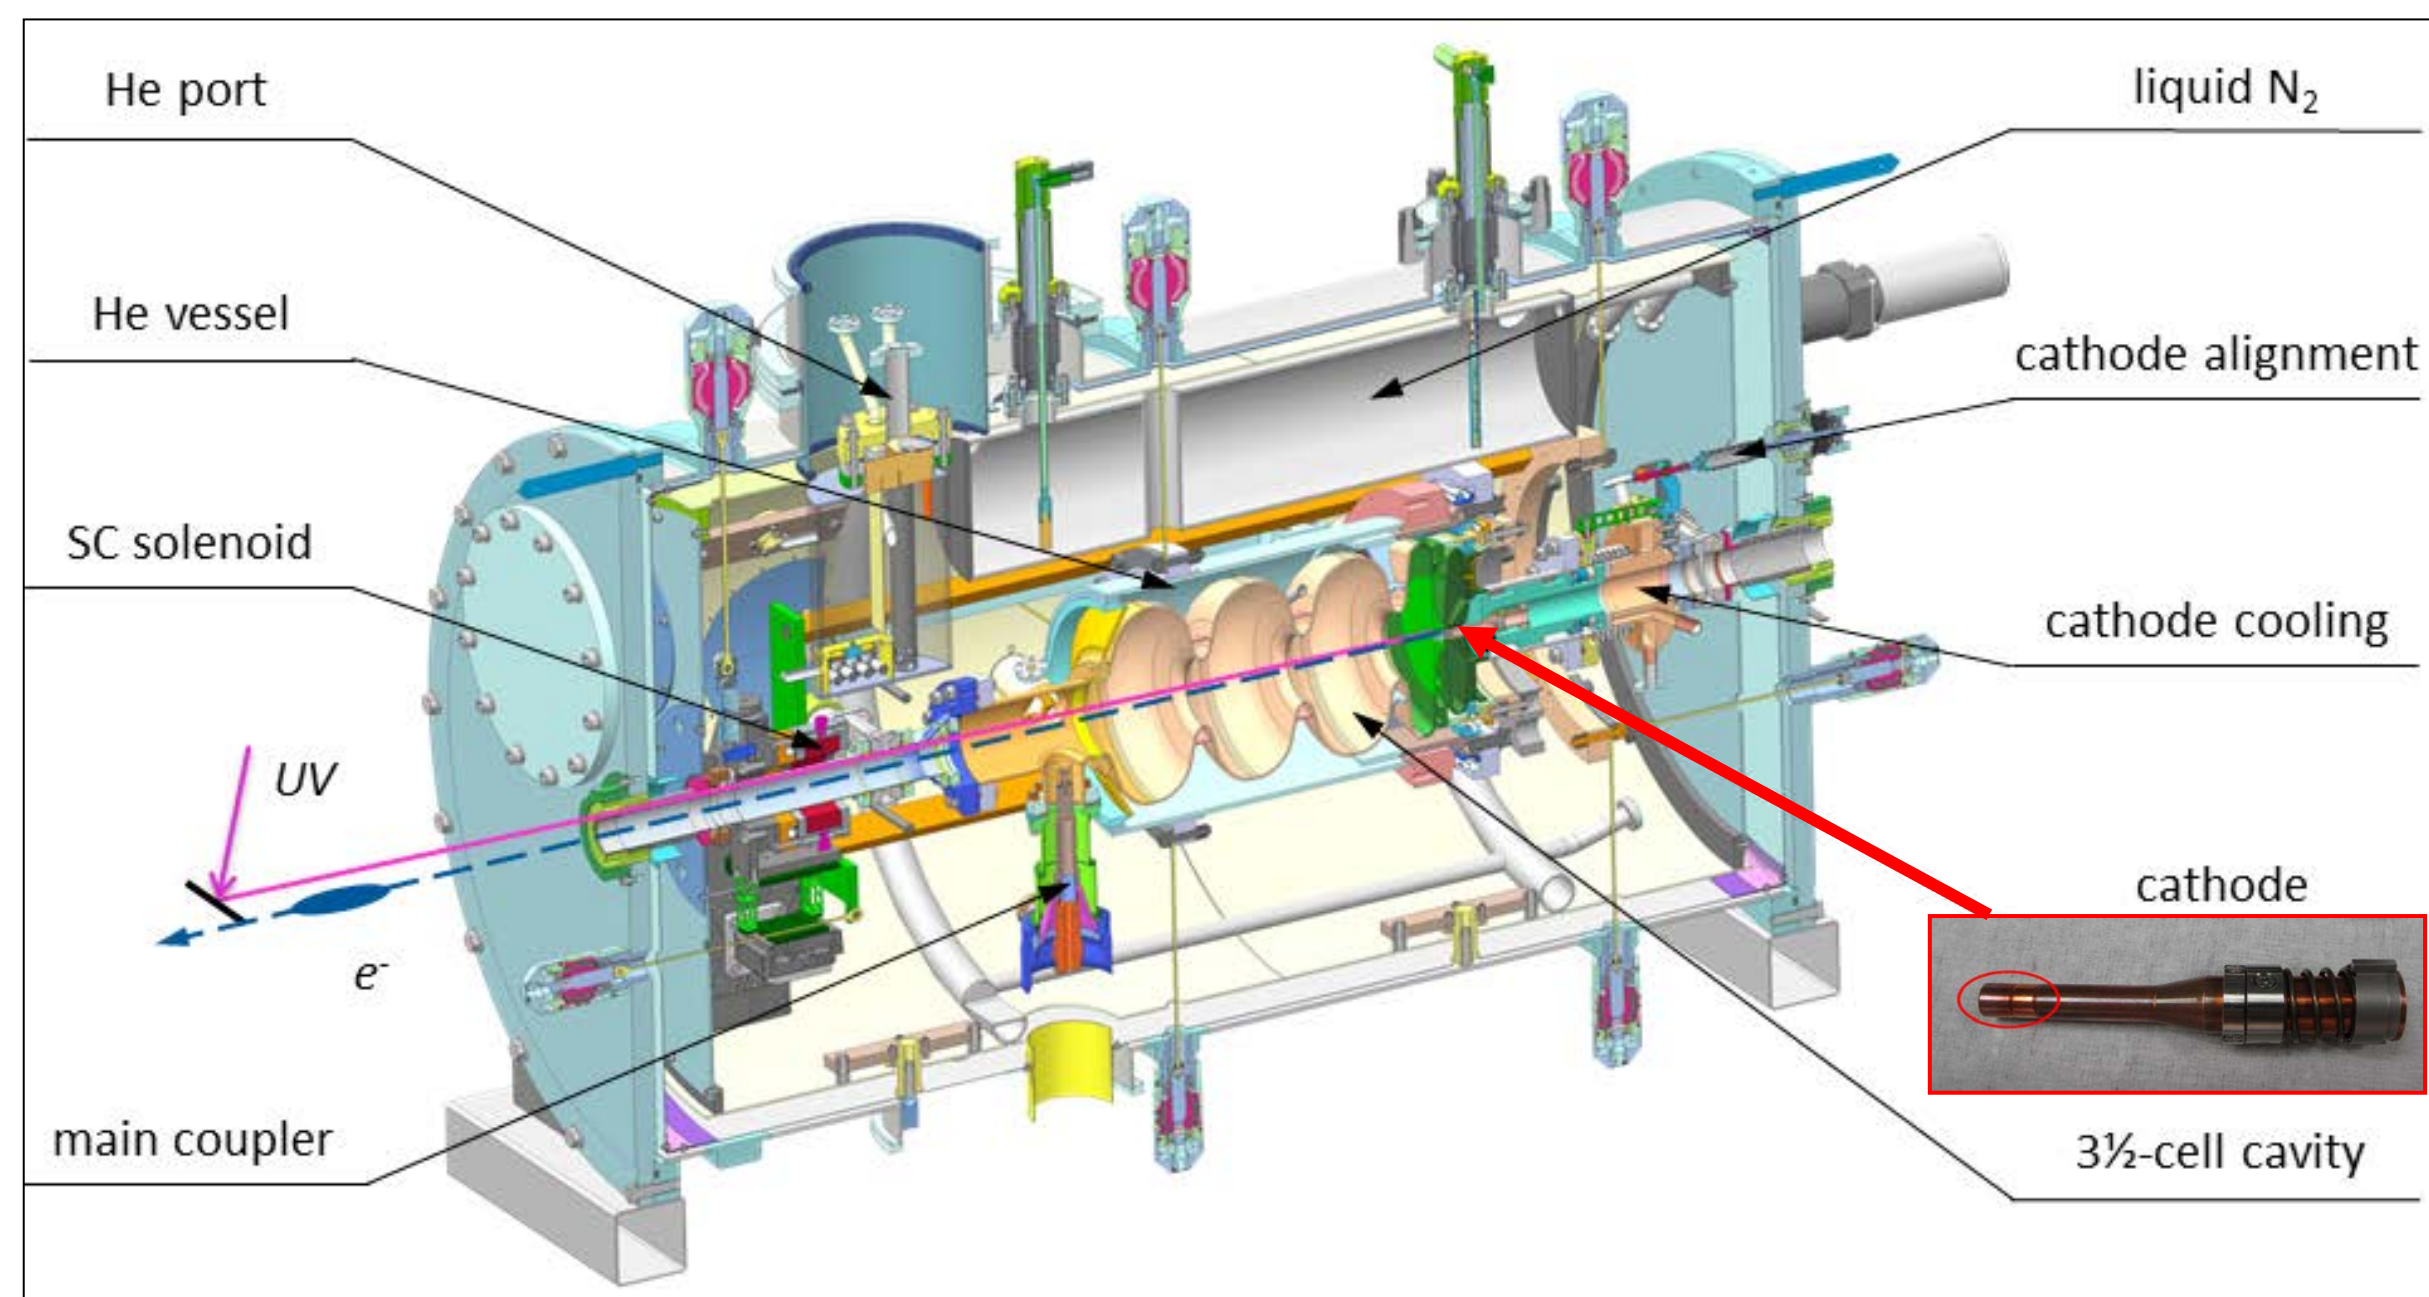

scheme of SRF gun II

desireable requirements for photocathodes

- searching for better photocathodes is one of the principle challenges for photoinjectors
- average current up to several mA is desirable
- novel III-V semiconductor with direct & wide band gap (3.4 eV)

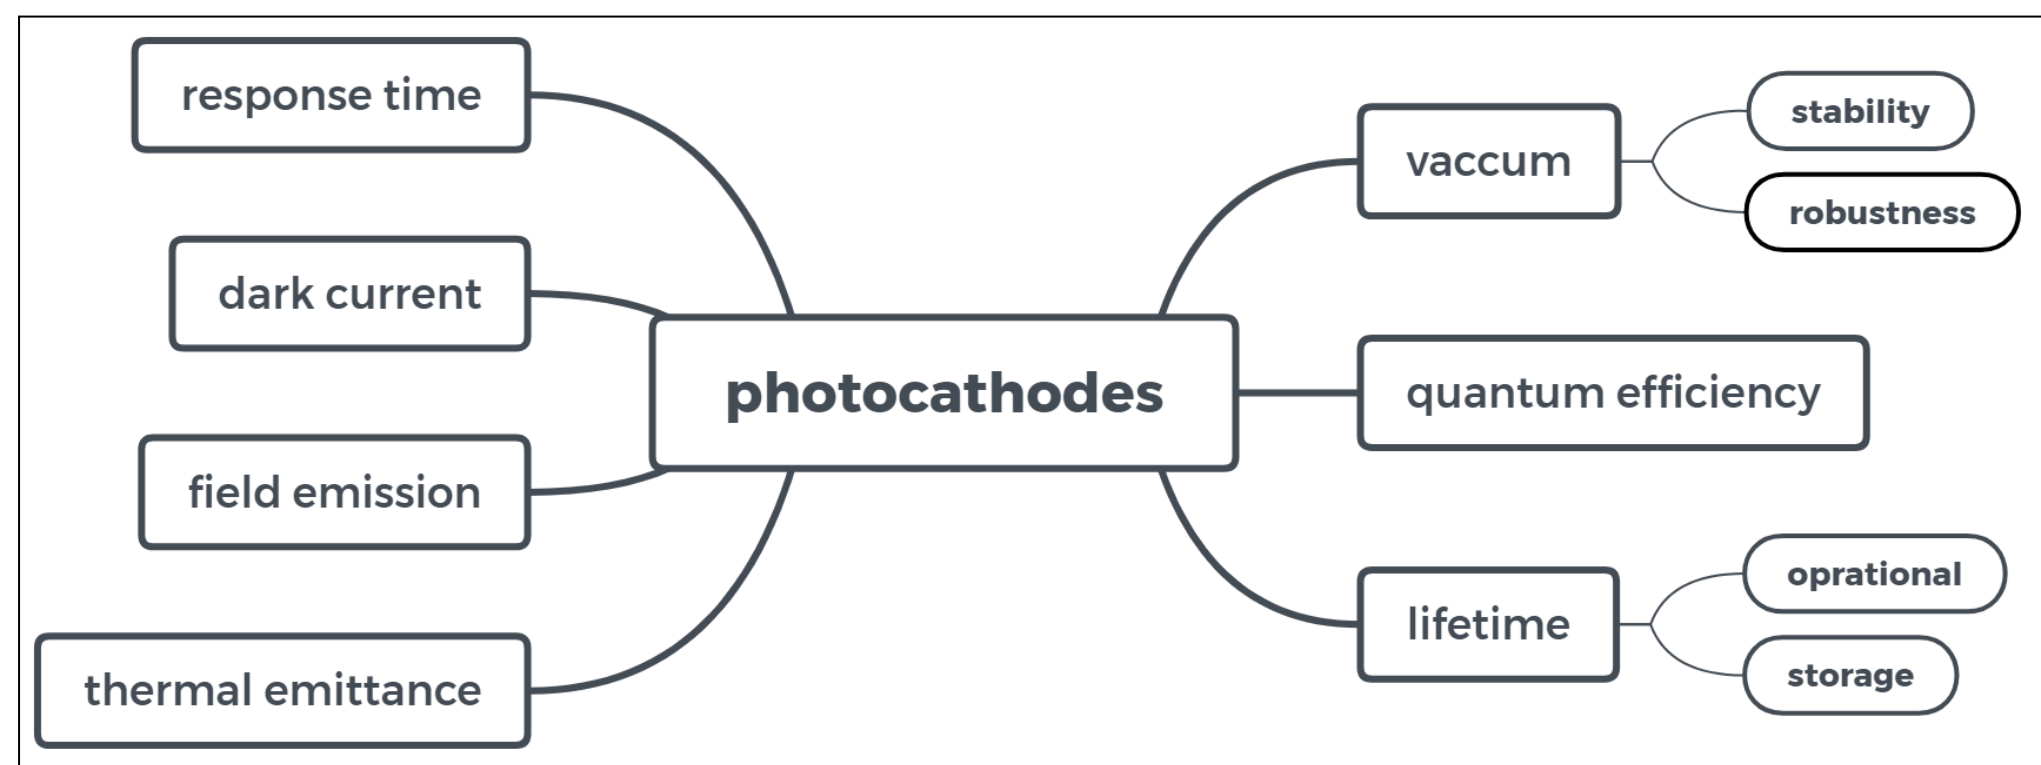


requirements for photocathodes used in accelerators

2. GaN (Cs)


GaN properties

- high QE (~40%)
- working wavelength range of 150 nm- 400 nm
- negative electron affinity (NEA) → with Cs
- high robustness: resistant to vacuum contaminations
- good storage: ~3 years under nitrogen atmosphere

$$QE = \frac{N_{\text{generated electrons}}}{N_{\text{incident photons}}}$$

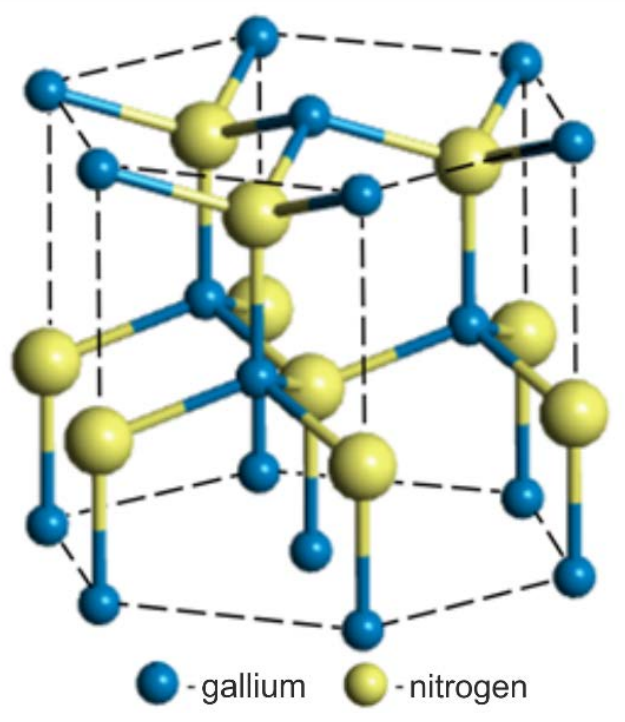

wurtzite structure of GaN

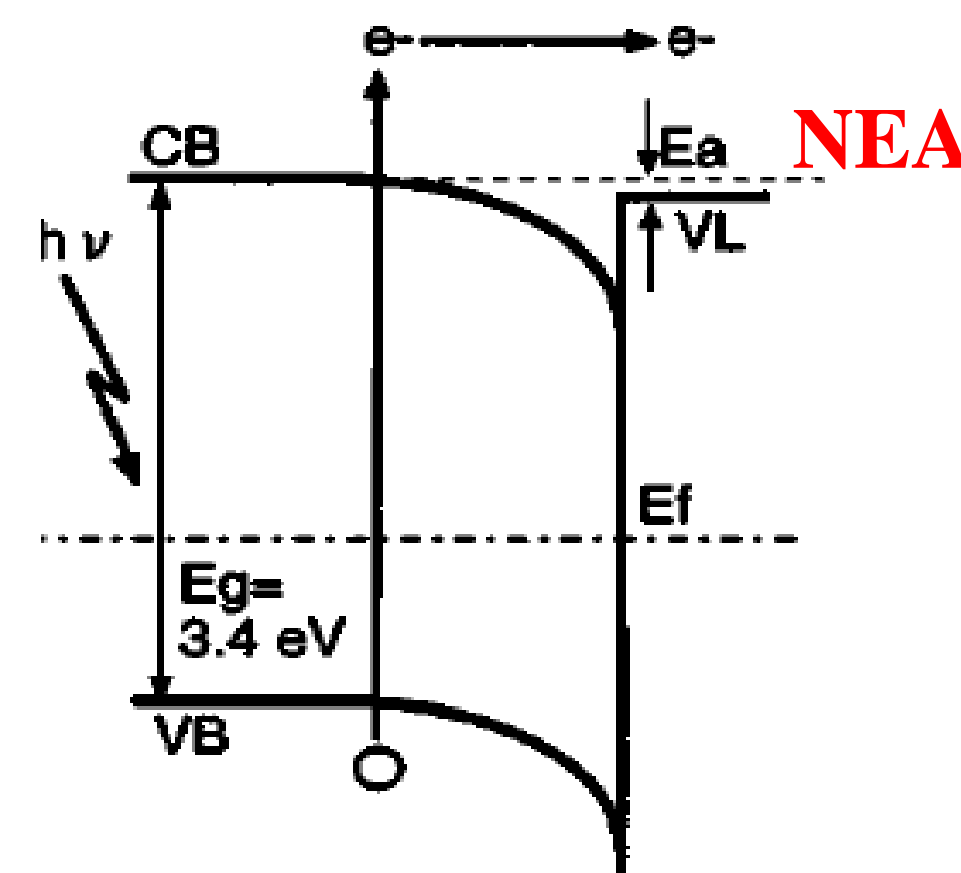

cesium activation & NEA

- Mg doping is necessary → increases diffusion length of e⁻ to surface
- activation with monolayer of Cs → work function near surface is lowered below vacuum level (NEA)

[S. Uchiyama., et al., APL 86, 103511 (2005)]

Table 1: Comparison of different photocathodes (for SRF Guns)

Property [Unit]	K ₂ CsSb	Cs ₂ Te	GaAs	Cu	Mg	GaN
harmonic *	2	4	2	4	4	3
λ [nm]	532	266	532	266	266	365
QE [%]	8	5	5	1.4E-2	0.5	~40
lifetime [hours]	4	> 100	~58	> 1 year	> 1 year	several years
response time [ps]	prompt	prompt	< 40	prompt	prompt	???
vacuum tolerance	poor	very good	poor	excellent	excellent	excellent

* For drive laser: Nd:YAG, output at 1064 nm

Introduction to the physics of electron emission, K.L.Jensen, 2017, p. 444 f.


Bazarov, Ivan V. et al. 2009. "Thermal Emission and Response Time Measurements of a GaN Photocathode." Journal of Applied Physics 105(8).

4. Ongoing working plan


analytical chemistry

- SEM, TEM & AFM
- XRD, XPS & EDX
- RBS & AES
- PL & QE


- cleaning process of GaN wafer? (analytical surface chemistry)
- comparison of GaN on different substrate material
- Cs-activation processing
- chemical stability under intensive laser?
- processing in SRF Gun II?

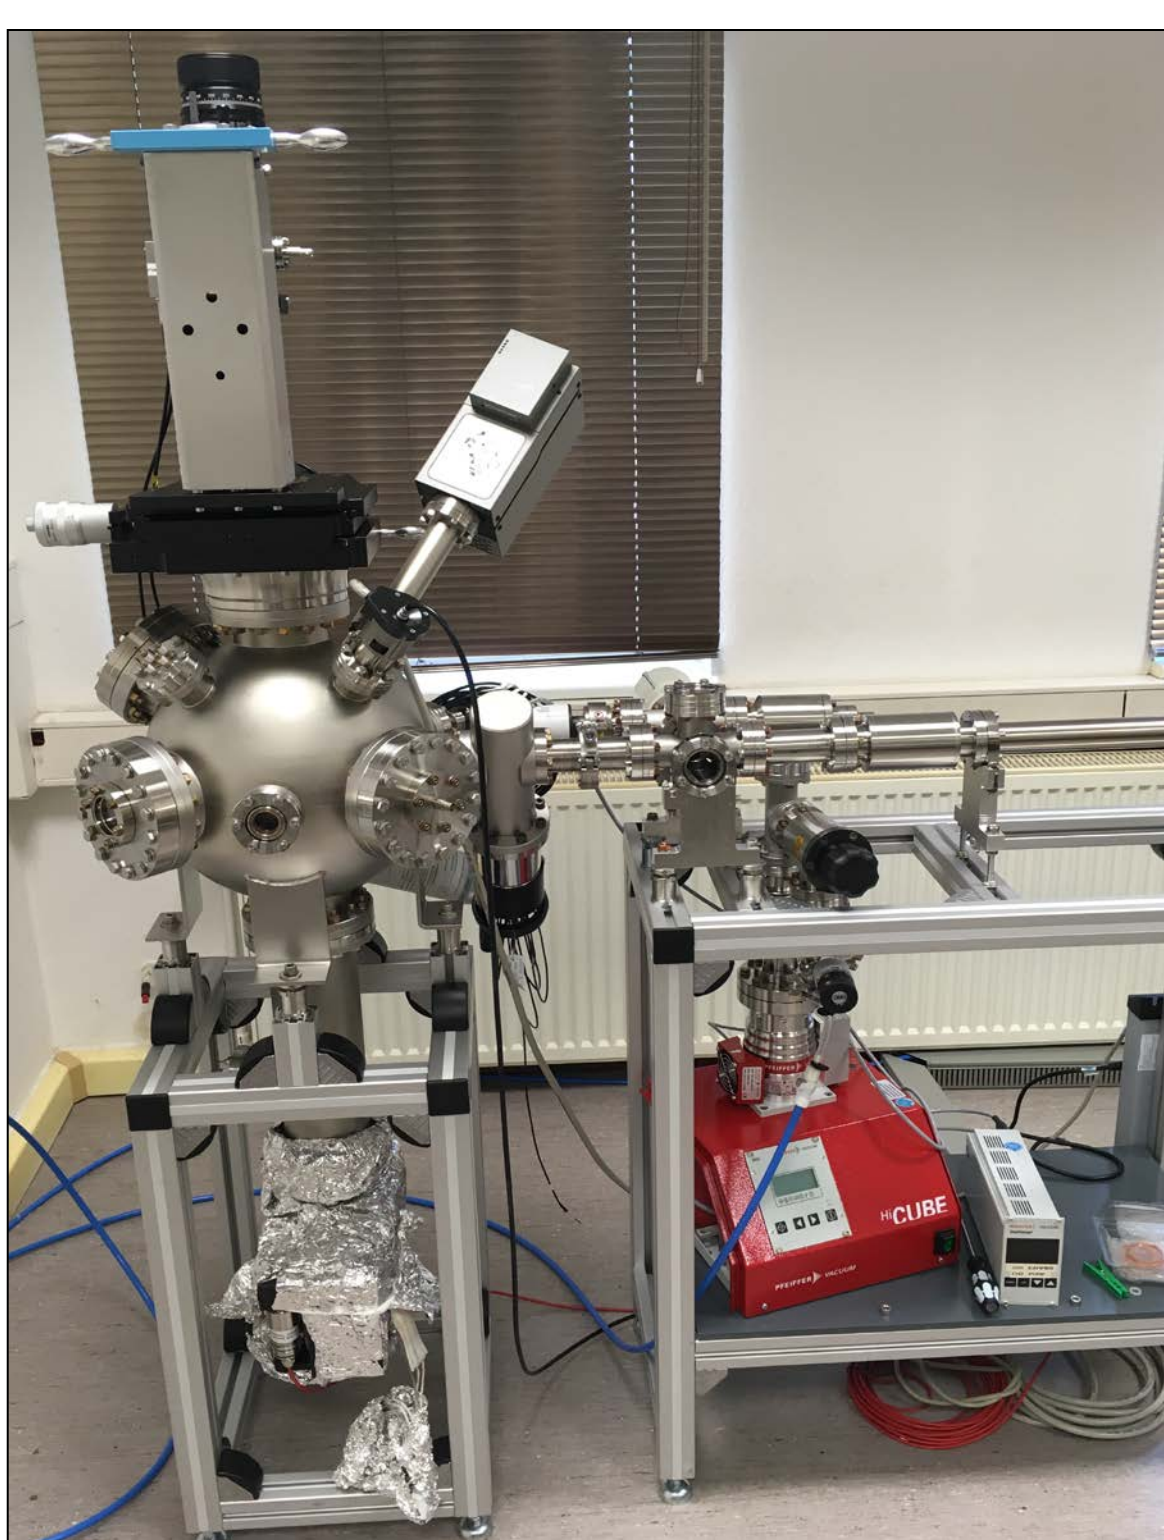

activation chamber

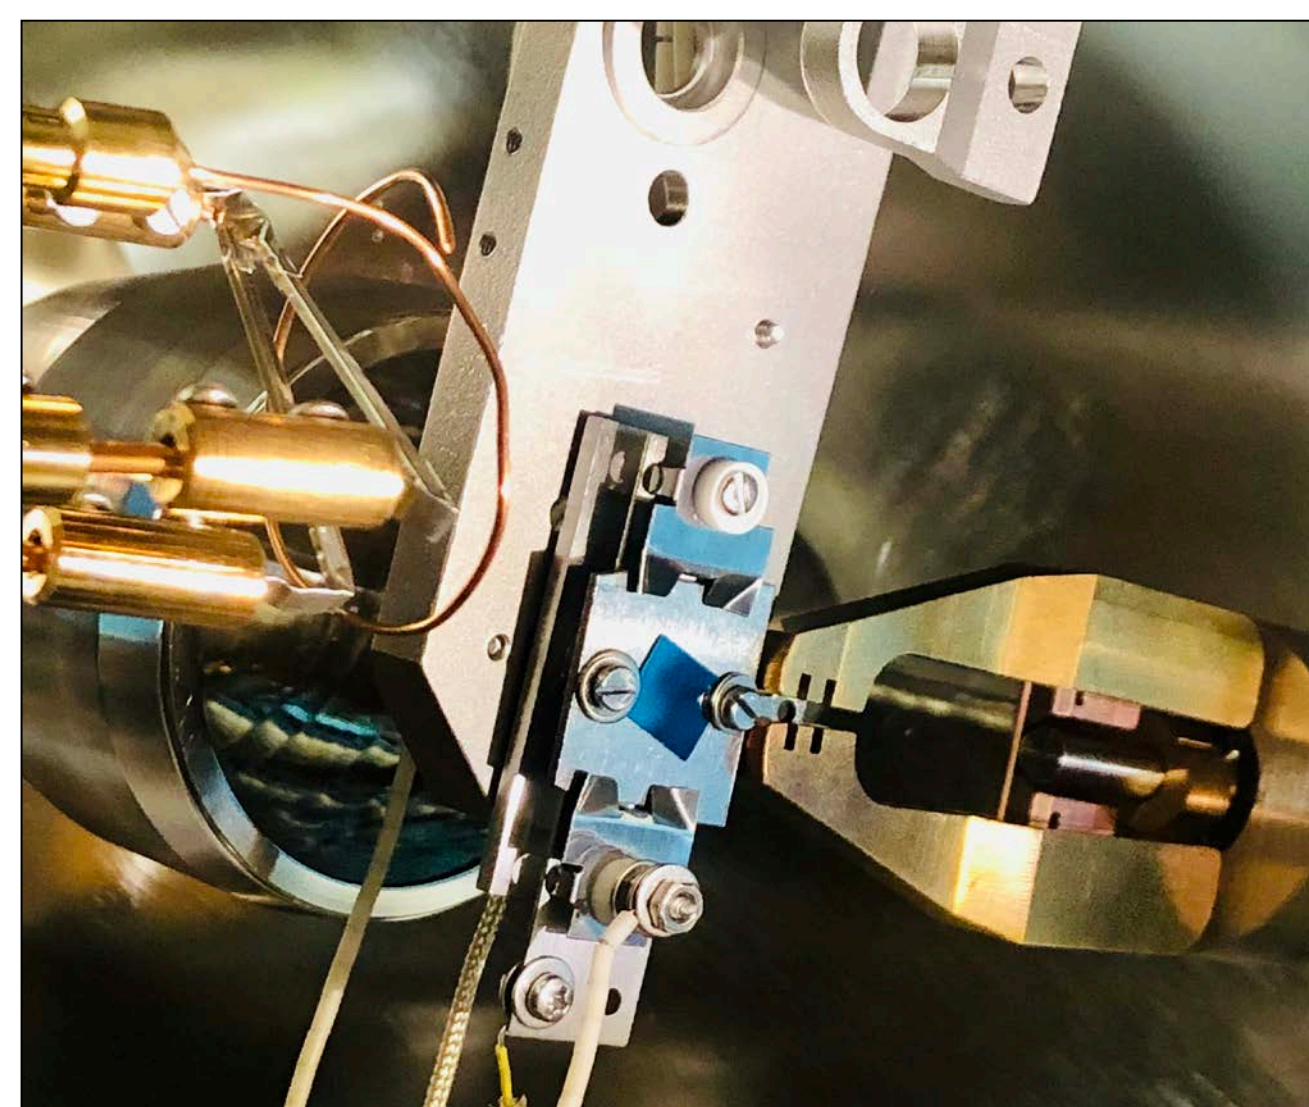

inside view in activation chamber

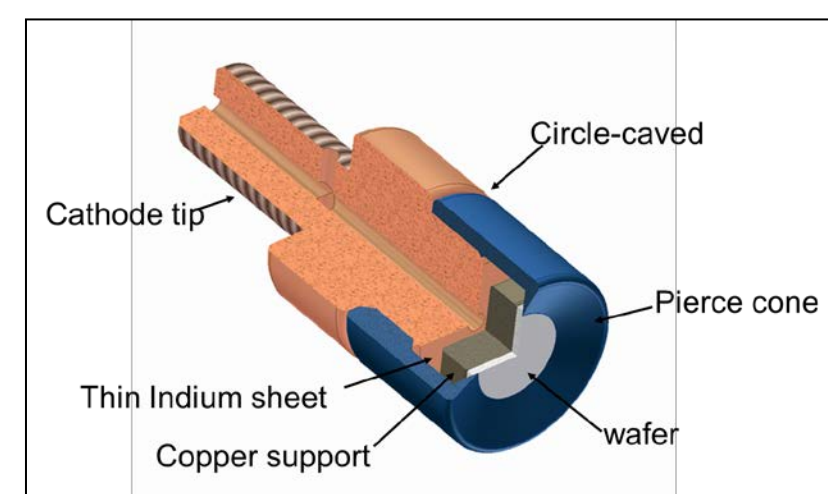

scheme of wafer holder



cathode (cathode body + plug)


Modification of activation chamber

combination with SEM/EDX

- easy measurement of activated GaN
- detect contaminations/ lattice impurities



sample chagement

- easy handling
- transfer from glove box without air exposure

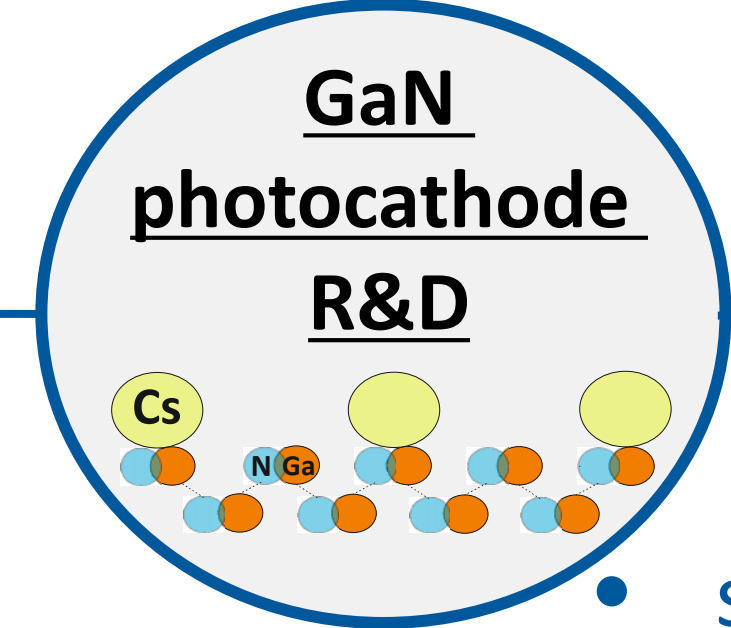

3. First activation treatments

- sample of 10¹⁷-level p-doped GaN grown on silicon substrate
- pre-heat treatment to remove absorbed residual gases on GaN surface
- activated with Cs-dispenser (SAES) to achieve the NEA surface
- background vacuum in the test chamber dropped down during activation

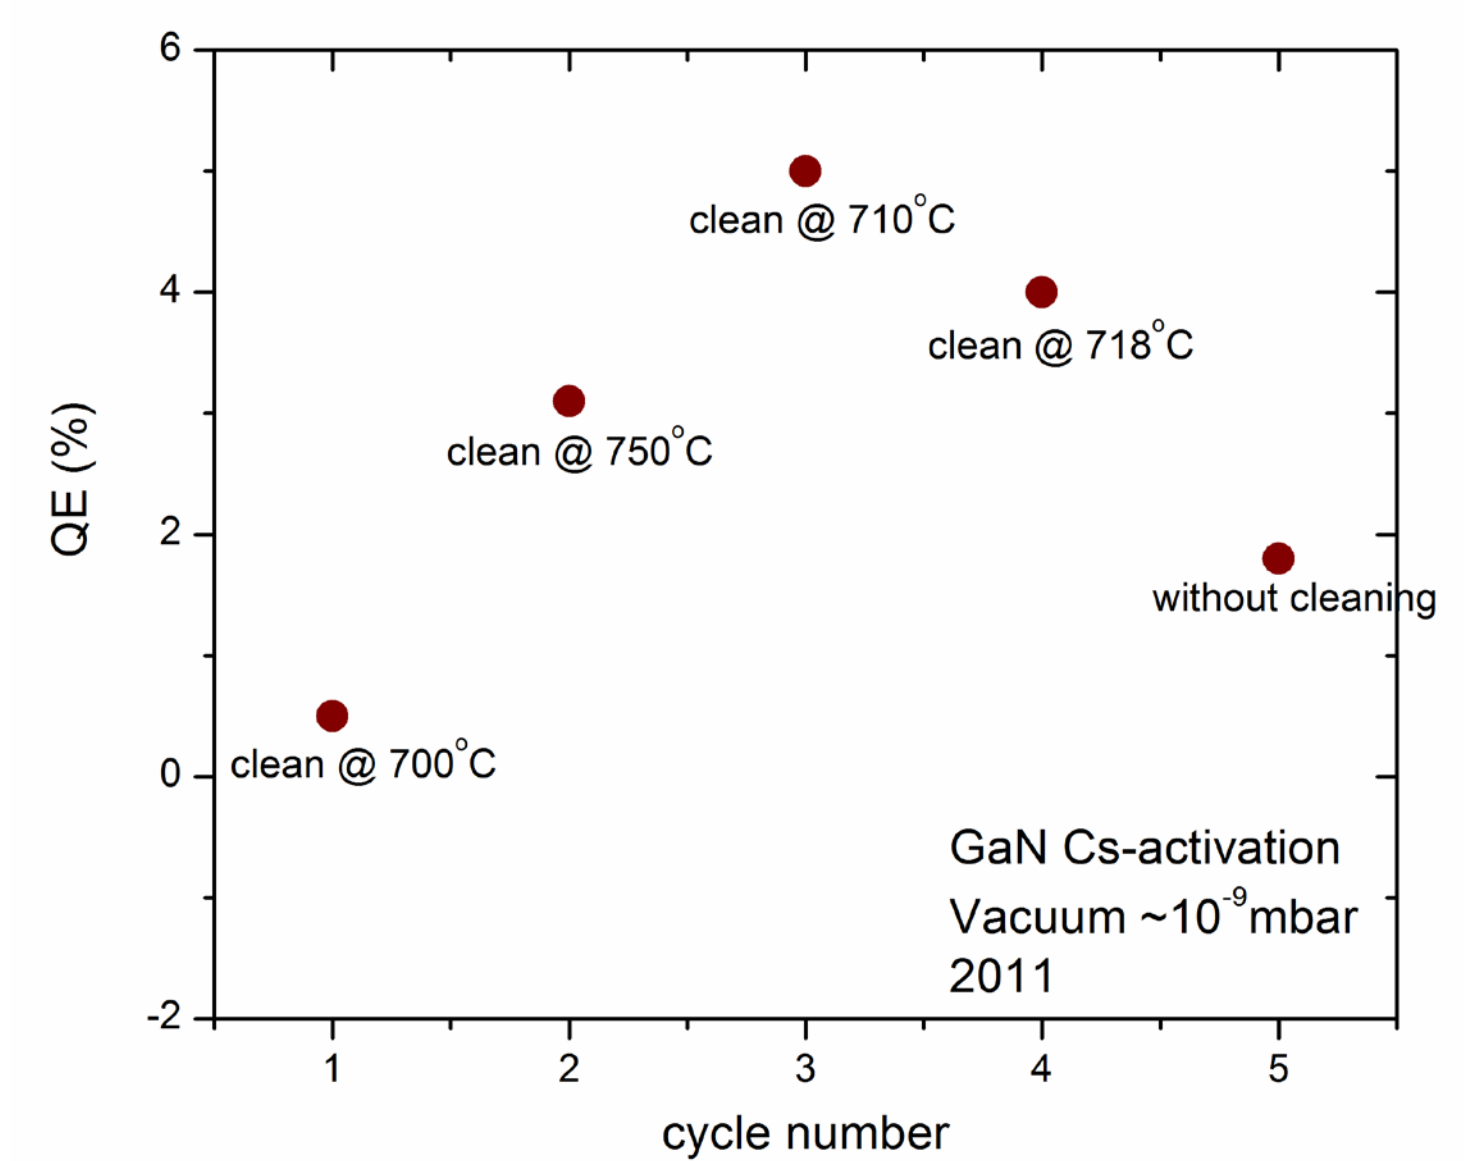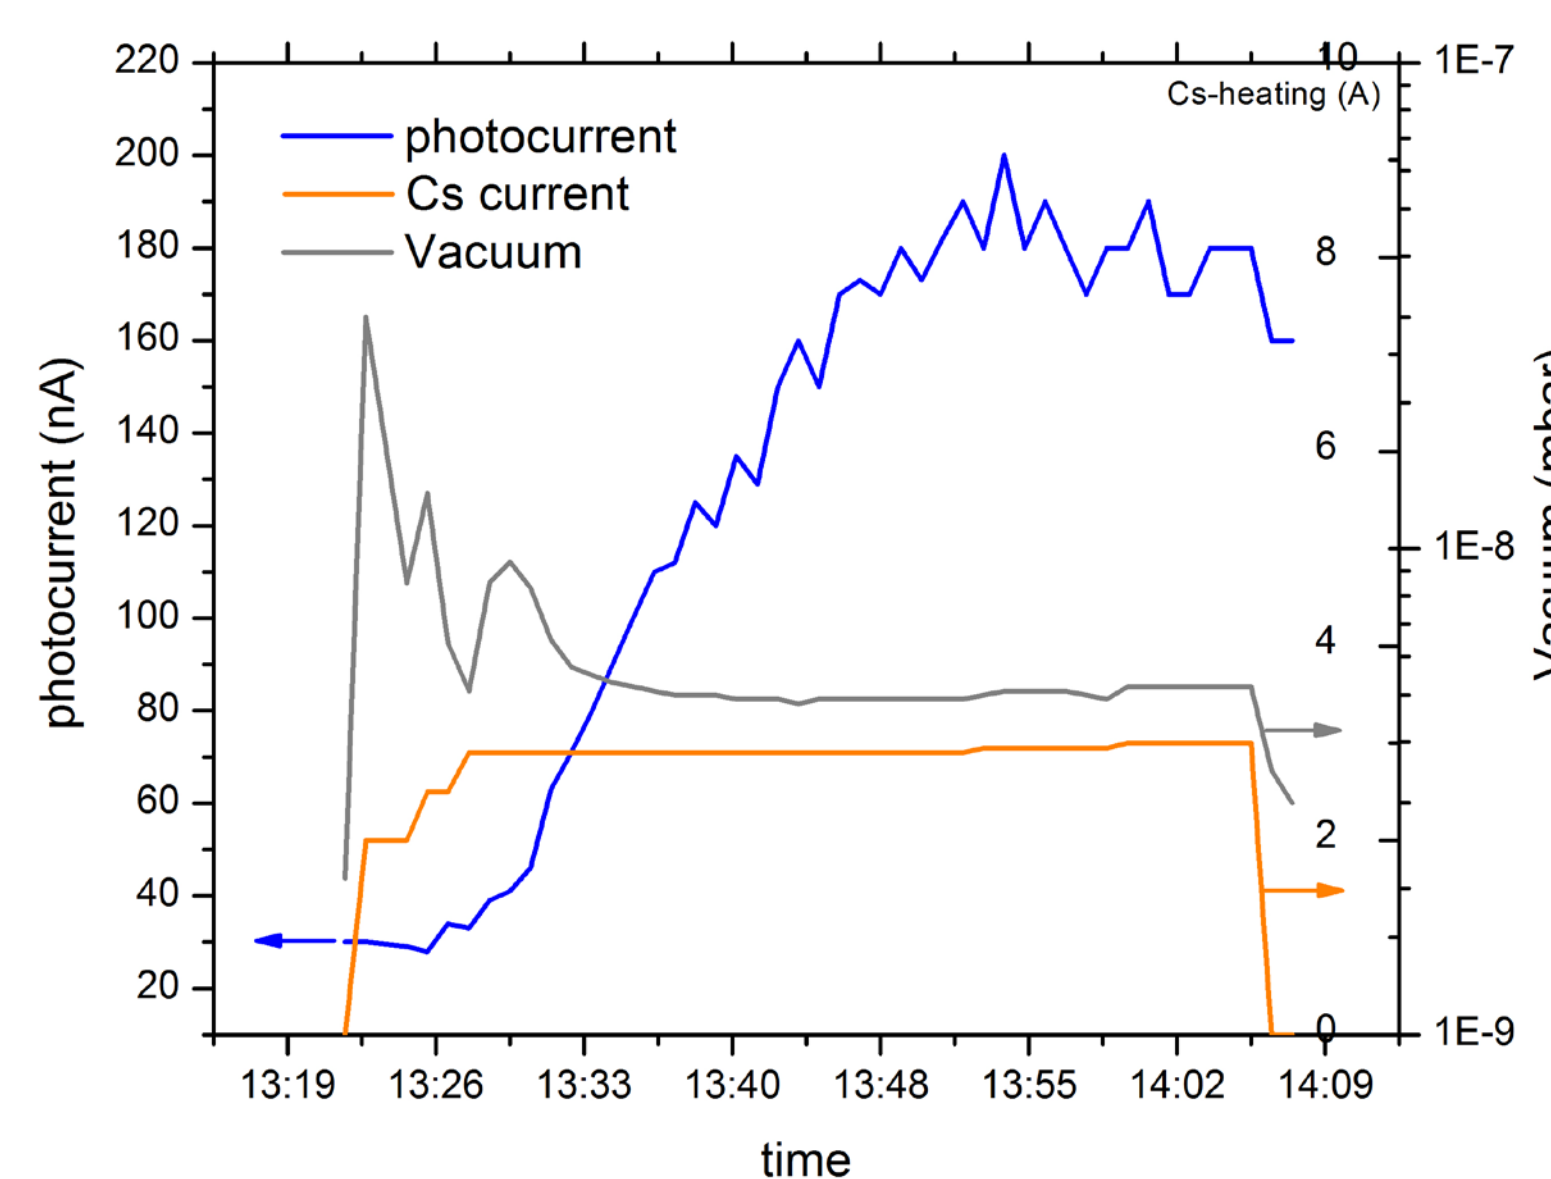


- 710°C seems suitable for the heat cleaning of GaN. 5% is the best QE in the activation tests on the same sample

& first cleaning treatments

Table 2: different wet chemical treating

sample No.	1	2	3	4
H ₂ SO ₄ :H ₂ O ₂ (1:1), T ~140°C (15 min)	✓	✓	✓	✓
rinsed 2 x H ₂ O	✓	✓	✓	✓
40% HF (30 s)	-	✓	✓	-
0.5% HF (2 min)	-	-	✓	✓
H ₂ O rinsing tank (10 min)	-	-	✓	✓
EtOH & Benzol/isopropanol (3:1) (1 min)	✓	-	✓	✓

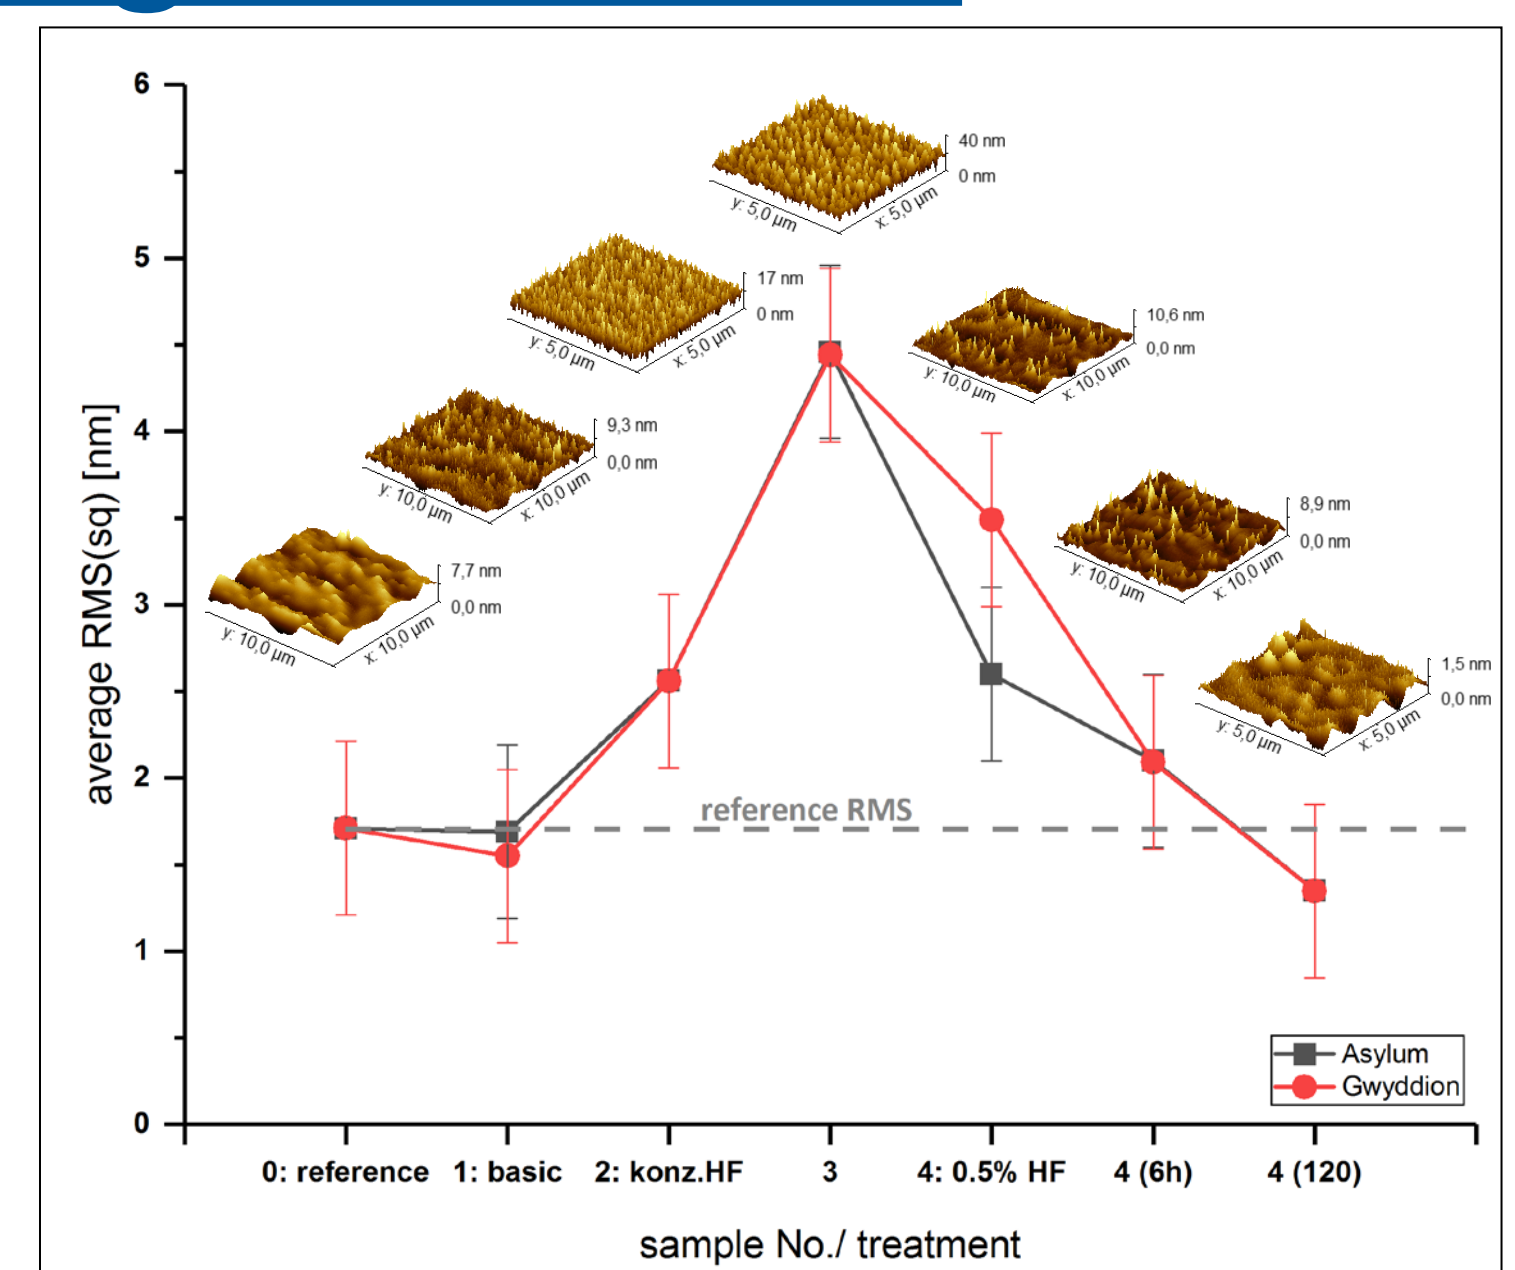

Acknowledgement

We would like to thank all our colleagues in ELBE for their support in this work.

We acknowledge the support of the German Federal Ministry of Education and Research grant 05K12CR1.

Contact:

M. Sc. Jana Schaber • Institute of Radiation Physics, Radiation Source ELBE • E-mail: j.schaber@hzdr.de • www.hzdr.de